




Truck Buffers



Truck buffers are designed to absorb shock and impact forces from moving machinery parts, and to protect vehicles from damage whilst manoeuvring.

Applications:

- Commercial Vehicles
- Construction Vehicles
- Agricultural Machinery
- Trailers
- Vehicle Loading Bays

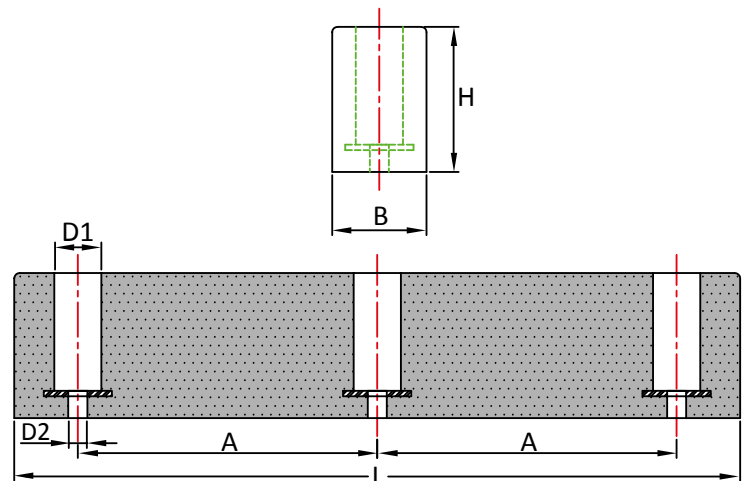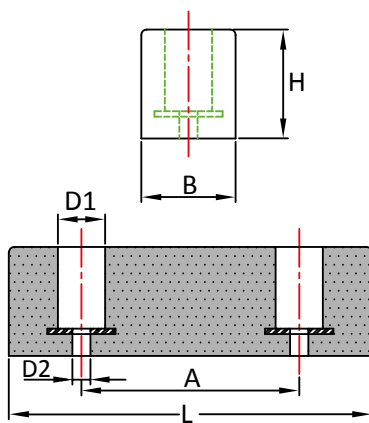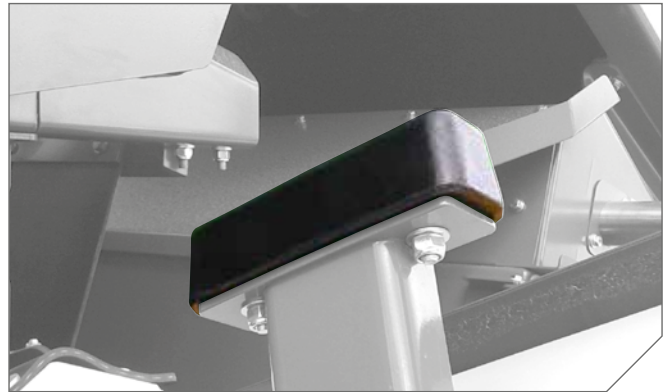

Part No	H	L	B	Holes	A	D1	D2
BS-1	15	125	40	2	60	20	8
BS-2	40	125	40	2	60	20	8
BS-3	50	125	43	2	60	20	8
BS-4	70	125	43	2	60	20	8
BS-198	50	198	54	2	118	25	10
BS-5	60	200	52	2	120	26	10.5
BS-6	80	200	52	2	120	26	10.5
BS-7	60	300	52	3	115	26	10.5
BS-8	80	300	52	3	115	26	10.5
BS-9	60	400	52	3	165	26	10.5
BS-10	80	400	52	3	165	26	10.5
BS-11	60	315	35	3	126	22	10.5

Max compression load in Kg deflection in mm.

This information is for guidance only. Customers are recommended to contact us for further technical information on products and applications. We reserve the right to alter specifications or withdraw products without notice.